 

 


# MANUAL OF TKLA-300137 LCD TV WALL MOUNT - UP TO 37"

 
NO.	PART	QTY.
1	VESA PLATE	1
2	WALL MOUNT PLATE	1
3	M5x8L SCREW	1
4	1/4"x2" HEX HEAD METAL TAPPING SCREW	4
5	M8 WASHER	4
6	#8 ANCHOR	4
7-1	M4x15L SCREW	4
7-2	M5x15L SCREW	4
7-3	M6x15L SCREW	4
7-4	M8x15L SCREW	4
8-1	M4 SPRING WASHER	4
8-2	M5 SPRING WASHER	4
8-3	M6 SPRING WASHER	4
8-4	M8 SPRING WASHER	4
9-1	M4x25L SCREW	4
9-2	M5x25L SCREW	4
9-3	M6x25L SCREW	4
9-4	M8x25L SCREW	4
10	ψ16.4-10.3x14.8L PLASTIC GASKET	4

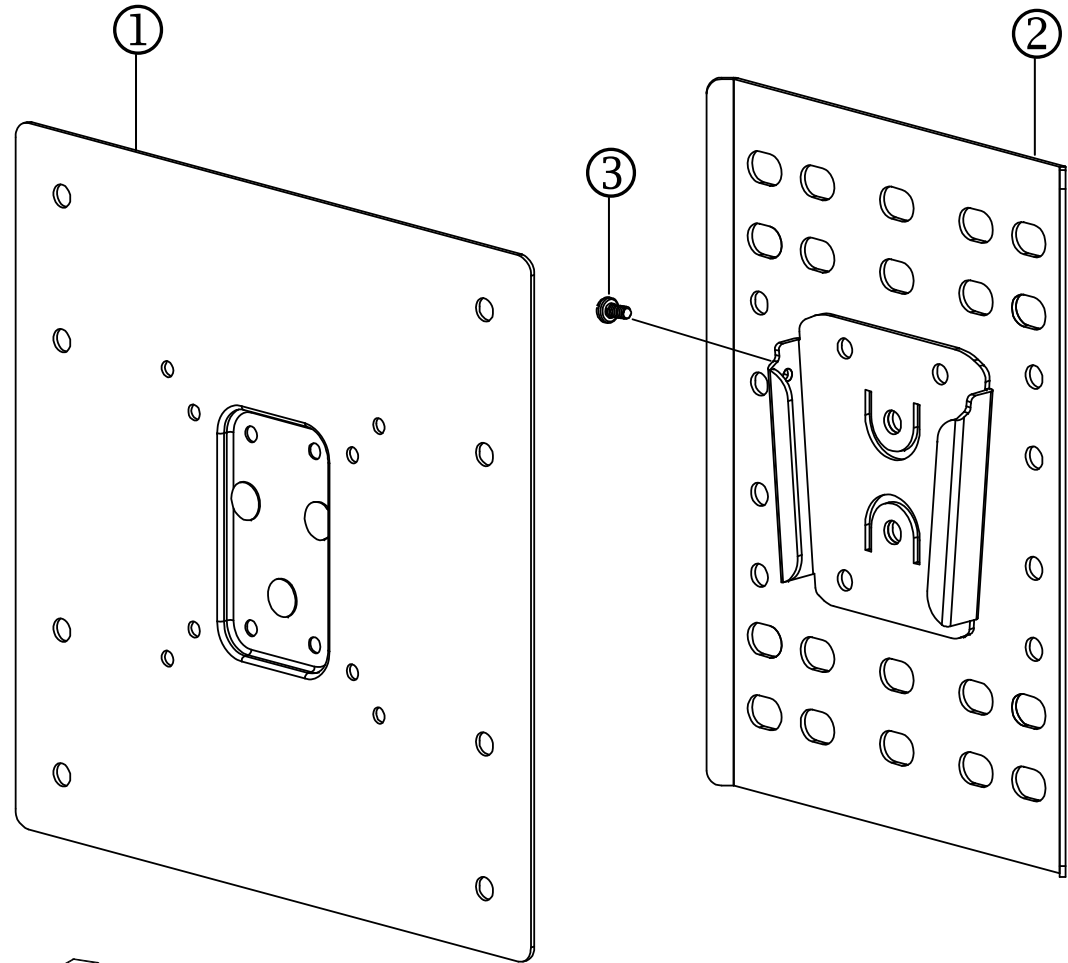

④



⑤




⑥



⑦



 ⑧



⑨



⑩