

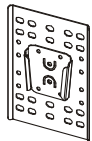
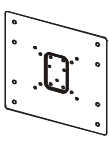


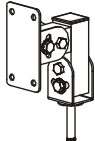


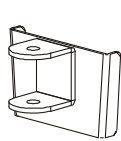


 
 



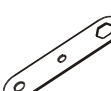


MANUAL OF TKLA-301237 LCD TV WALL MOUNT

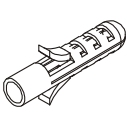CAUTION


- Please read this manual carefully before installation and install by following the instructions.
Please keep this manual for future reference.
- The manufacturer shall not be responsible legally for any damage to this product that results from accident, abuse, misuse, natural or personal disaster, or any unauthorized disassembly, repair or modification.
- The wall mount is designed for installing and removing easily. The manufacturer shall not be liable to the damage of equipment and personnel injuries due to human factors or natural disaster, such as earthquake and hurricane.
- The wall mount must be installed by professional personnel.
- At least two persons are needed to install or remove the product in order to prevent from any hazard caused by falling objects.
- Please check carefully before installation the area where the wall mount will be installed.
 - ⊙ Avoid any place with high temperature or humidity or any place where will contact water.
 - ⊙ Do not install the product close to the vents of air conditions and avoid dusty and fummy place.
 - ⊙ Do not install on inclined wall and irregular surface. Please install on vertical wall.
 - ⊙ Do not install at place subject to vibrations and shocks.
- Please make sure the space around the display is enough for installation.
- Please make sure the wall is strong enough to sustain the weight at least four times the total weight of the display and the wall mount.
Also make sure the wall could survive the earthquakes and other shocks. To ensure safety and avoid accidents, please choose the durable and highly safe place.
- Do not modify any accessory, design or structure. Do not use broken parts. Contact the local distributors if there is malfunction or fault.
- Tighten all screws (do not screw with excess force to prevent the screw, thread, wall mount and the display from damage).
- The maximum weight of panel display or plasma TV the wall mount could sustain is 15kg (33lbs.)
- Once the wall mount is removed, the drilled holes and bolts will be left on the wall or the applied position.
Stains may occur after long term use.
- To the extent of permitted by applicable law, the manufacturer disclaims any implied warranty of merchantability or fitness for a particular purpose. In no event will the manufacturer be liable to the purchaser or to the user of the product for any damages, expense, lost revenues, lost savings, lost profits, or any other incidental or consequential damages arising from the purchase, use or inability to use the product, even if the manufacturer has been advised of the possibility of such damages.
- Specifications are subject to change without notification.

COMPONENTS

A WALL MOUNT PLATE 	B VESA PLATE 	C JOINT 	D JOINT HOUSING 	E 1/4"x2" STEEL TAPPING SCREW * 4 	F M8 WASHER * 6 
G #8 ANCHOR * 4 	H M4x10L SCREW * 4 	I M4 NYLON LOCK NUT * 4 M8 NYLON LOCK NUT * 1 	J TUBE * 1 	K M4x15L SCREW * 4 M5x15L SCREW * 4 M6x15L SCREW * 4 M8x15L SCREW * 4 	L M4 SPRING WASHER * 4 M5 SPRING WASHER * 4 M6 SPRING WASHER * 4 M8 SPRING WASHER * 4 
M M5x8L SCREW * 1 	N PLASTIC CAP * 1 	O HOOK * 1 	P M4x25L SCREW * 4 M5x25L SCREW * 4 M6x25L SCREW * 4 M8x25L SCREW * 4 	Q φ16.4-10.3x14.8L PLASTIC SLEEVE 	R TOOL * 1 

INSTALLATION

Step1 Install Wall Mount Plate (A) at the applied position

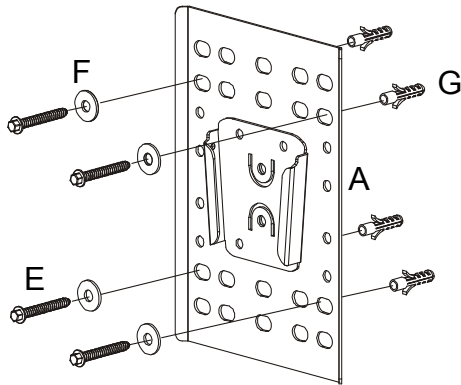


1. Wooden Wall or Drywall -drill a 5.0mm pilot hole at each location using an electric drill. Fix Wall Mount Plate (A) to the wall using 1/4"x2" Steel Tapping Screw (E) & M8 Washer (F).
2. Concrete- drill a hole at each location using a 8mm masonry bit. Remove any excess dust from the holes. Insert one #8 Anchor (G) into each hole. Fix Wall Mount Plate (A) to the wall using 1/4"x2" Steel Tapping Screw (E) & M8 Washer (F).
3. Do not release Wall Mount Plate (A) until all screws are secure.



Please check the area where LCD TV will be installed carefully. Make sure it is strong enough to sustain the total weight of the display and wall mount kit. Do not install on irregular surface. The wall mount kit must be installed by professional personnel. At least two persons are needed to install or remove the product in order to prevent any accident.

Step2 Assemble VESA PLATE (B) with JOINT(C)

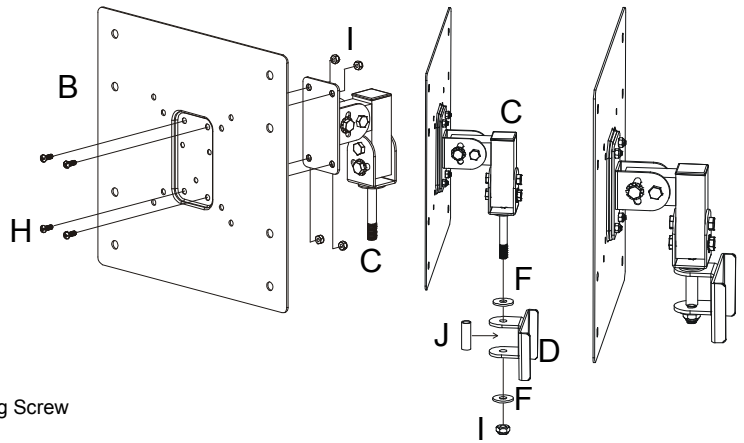


1. Combine VESA Plate (B) with Joint (C) by using M4X10L Screws (H) and M4 Nylon Lock Nut (I).
2. Assemble Joint (C), M8 Washer (F) - Tube (J) & M8 Nylon Lock Nut (I) with Joint Housing (D) by using tool (R).



Please fasten the Screws and the Nylon Lock Nut tightly to prevent the mount from falling.

Step3 Assemble VESA Plate (B) with LCD TV

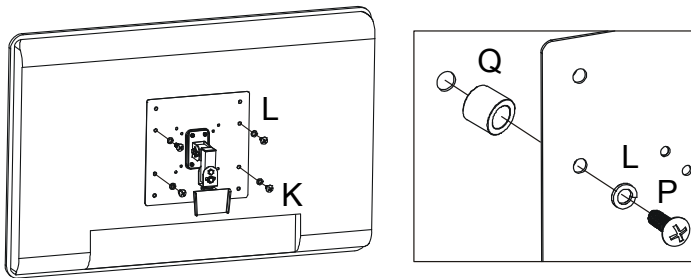


1. Place the LCD TV at flat place. Choose from Screws (K) the most appropriate one conforming to the size of mounting holes on the back of LCD/Plasma TV. And go through the Spring Washer (L) which matches the chosen screw
2. Use the screw and washer combo to fix the VESA Plate (B) to the back of LCD/Plasma TV. Do not over tighten the screws.
3. If the back of TV has protrusion, turn to choose from the longer Screws (P) and use Plastic Sleeve (Q) in addition to the Spring Washers (L) to fill in the space between the VESA Plate and the surface of LCD TV.



The VESA holes at the back of different brands of LCD TV/Plasma TV might be different. If the screws do not match the VESA holes at the back of LCD TV, please contact your distributor.

Step4 Assemble the VESA Plate (B) with Wall Mount Plate (A)

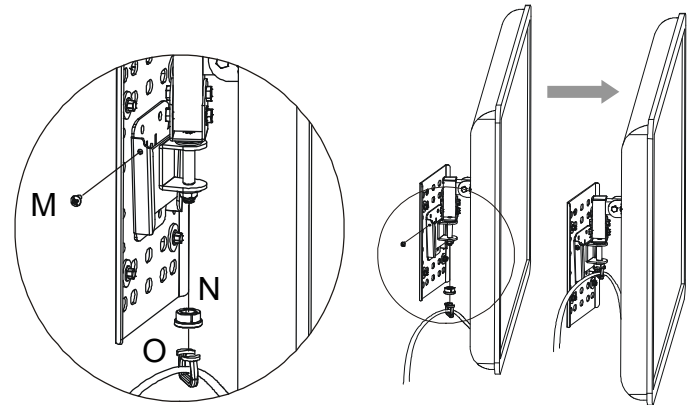


1. Assemble VESA Plate (B) with Wall Mount Plate (A). Please screw M5x8L Screw (M) to the wall mount to prevent the display from falling.
2. Adjust the view angle of LCD TV to the angle you prefer. Please tighten the bolts at both sides after adjustment in order to fix the optimal view angle.
3. Cable Management : Gather the cable with Plastic Cap (N) & Hook (O).



When adjusting the bolts, do not take out the bolts to prevent any damage. Please remember to tighten the bolts after adjustment in case of shocks. Check the bolts regularly. Tighten the bolts again if they become loose. Please contact the distributor if the condition is not improved.

DIMENSIONS

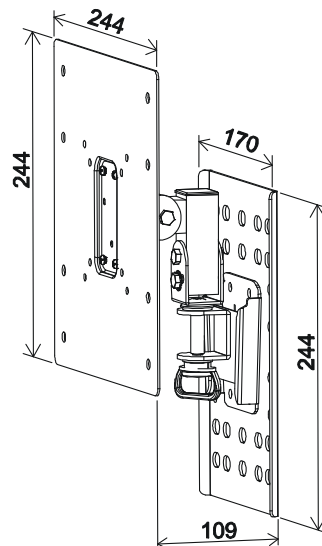

Unit: MM

TOOLS REQUIRED

- Crosshead Screw Driver
- Portable or Electric Drill
- 7 & 13mm Socket Wrench or 7 & 13mm Ratchet Wrench
- 5mm Drill Bit for Wooden Wall or Drywall Installation
- 8mm Masonry Bit for Concrete Installation